


# SPILLTECH

## SPILL RESPONSE PROCEDURE



### 1 BE SAFE

- Make sure it's safe to clean up the spill.
  - Check MSDS sheets.
  - Put on safety gear.

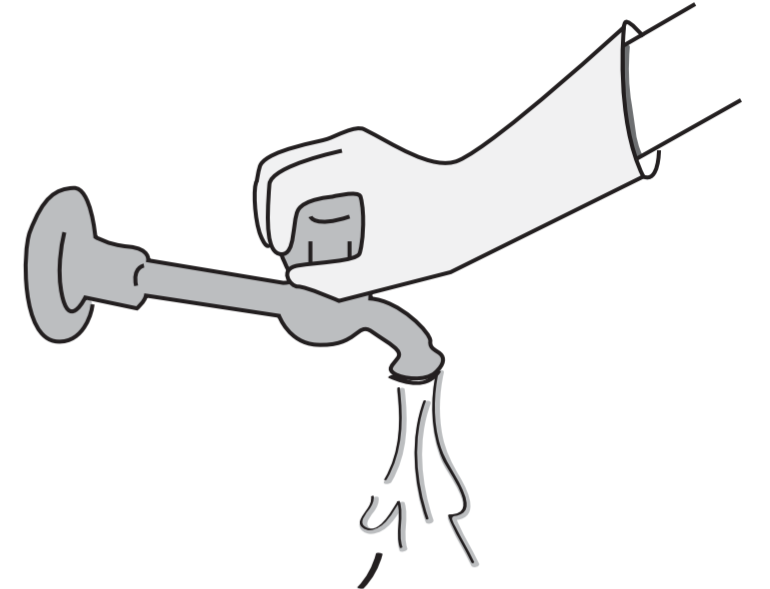


### 2 STOP THE SOURCE

- Plug the leak, right the container or turn off the tap to stop the spill getting worse.



### 3 PROTECT THE STORMWATER

- Stop the spill spreading using SpillTech absorbent socks.
  - Block stormwater with a drain seal, or sand bags.

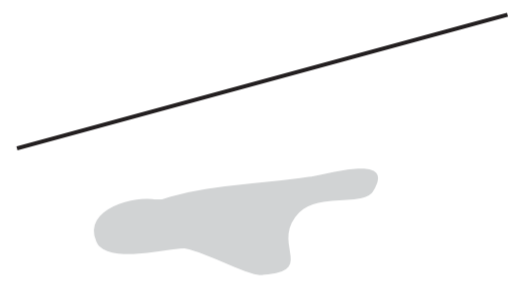

### 4 NOTIFY

- Contact your supervisor.
- For major spills and those that reach stormwater contact your regional council pollution hotline:  
AUCKLAND 09 377 3107    CANTERBURY 0800 765 588  
WAIKATO 0800 800 401    OTAGO 0800 800 033  
WELLINGTON 0800 496 734




### 5 CLEAN UP

- Use SpillTech absorbents to clean up spills.
  - SpillTech absorbent pads, socks and pillows are ideal for smaller spills.
  - SpillTech UltraZorb is best for large spills.

### 6 DISPOSE PROPERLY

- Use a reputable waste disposal contractor to remove contaminated absorbents and clean up gear.

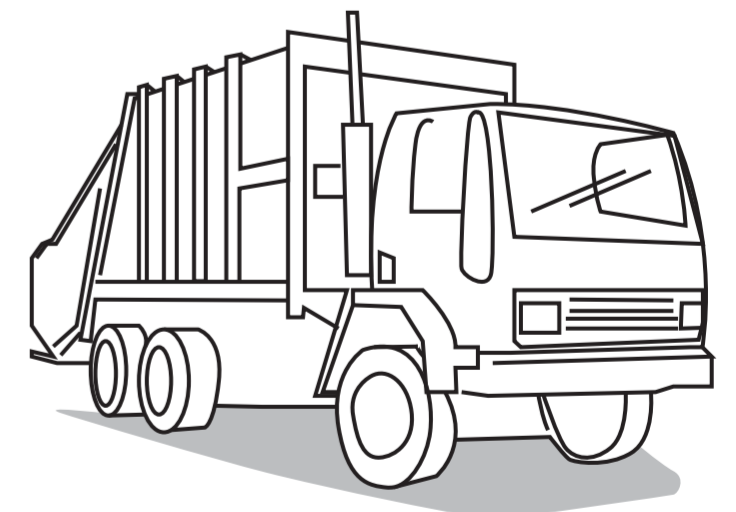

### 7 RE-ORDER & REVIEW

- Replace all used spill kits and absorbents immediately.
- Review the cause of the spill and take action to prevent a repeat.

